 


## Massage Chair

### LC6100

---

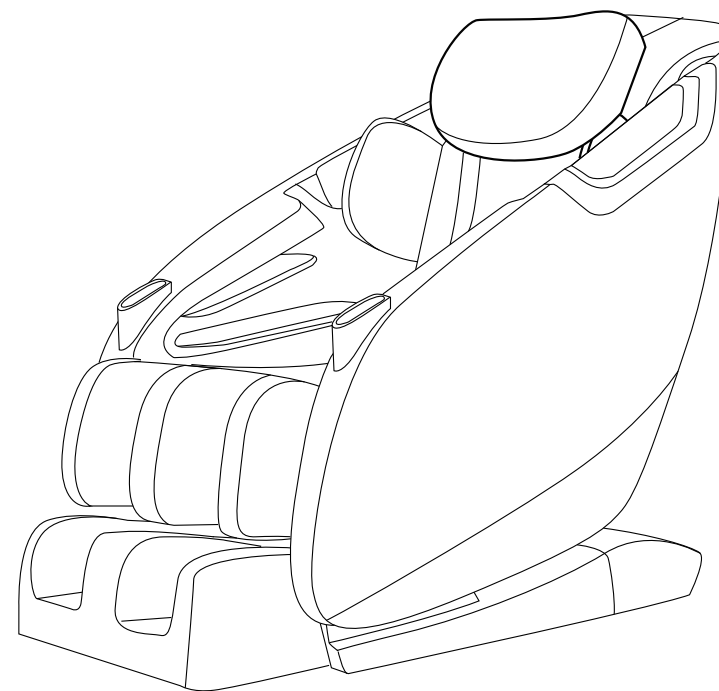

M\_LC6100\_2017  
Printed in China



---

## CONTENTS



Safety precautions.....	1-4
Main function.....	5
Part name&function.....	6-7
Before use.....	8-11
Adjusting massage chair.....	11-13
Start massage.....	13-14
Image display example.....	15-16
Music play.....	17
Finish massage.....	17
Troubleshooting.....	18
Safety check.....	19
Storage and care.....	20
Product specification.....	21

Safety Precautions






- Be sure that you have read these SAFETY PRECAUTIONS thoroughly before using.
- The Operating Manual contains important information about how to use the chair safely and correctly, avoiding possible damage to property or injury to persons using the chair and others.
- The Symbols shown below are used throughout the Operating Manual to highlight important safety instructions. Please adhere to all precautions.




 Warning	This action could result in serious injury or death.
 Attention	This action could result in personal injury or damage to property.







[Marginal Data]

	The symbol on the left means “Do not disassemble.”
	The symbol on the left means “Unplug the chair.”


- Remember to keep this Operating Manual in an easily accessible place.s





 Warning	
Any abnormal thing or malfunction happens,stop using immediately If the following situations happen without stopping using,it may cause fire or electric shock. Please turn off the power switch,unplug the power cord.Then contact retailer for repair.	
 	● Smoke comes out of the product,strange sound can be heard.Disconnect the power immediately.Contact retailer for repair.Do not repair the product by yourself.
	● There is water inside the product.
	● There are sundries inside the product.
	● The product falls onto the ground badly,or the casing is damaged.
 Attention	
	● If you feel any discomfort at any time during use, discontinue use immediately. ● Then consult your medical physician. ● The product shall be placed on a flat ground to avoid injury and accident. Before using,make sure if power switch is working normally


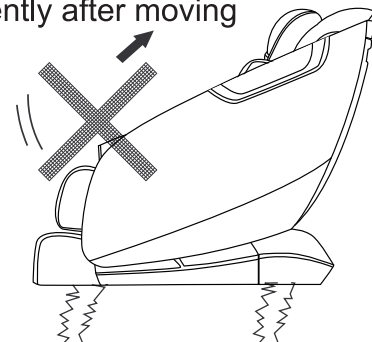 
 Warning	
 PROHIBITED	The following persons must not use this product Persons who have been instructed by a doctor to avoid massage therapy. Ex. Thrombosis,severe aneurism, acute varicosity, or dermatitis and/or skin infection.
	Persons with any of the following conditions should seek medical advice before using. 1.Have a pacemaker or similar implanted medical device,are easily influenced by electromagnetism 2.Have a malignant tumor 3.Have heart disease 4.Are in a menstrual period or are pregnant 5.Have serious diabetes,peripheral circulation disorders 6.Have perceptual disturbance 7.Have trauma on the massage part 8.Have high fever (100°F or higher),like acute inflammation,typhoid fever,hypertension 9.Are heavily ill,or have weak body. 10.Have fracture,acute osteoporotic pain 11.Have muscle sprain,muscle inflammation Plus,those who have weak body,feel uncomfortable,like to be quiet shall take serious consideration before using.
The time of a program can be adjusted as 10,20,30 minutes, please avoid continuous massage in the same position. To continue to use, please wait more than 30 minutes to avoid excessive stimulation of muscle or nervous system.	


 Warning	
 FORBIDDEN WET HAND	Do not use the product when body is wet.In order to avoid electric shock or machine malfunction.
 CUARD AGAINST DAMP	Do not put the product into the water or other liquid,do not use or keep the product in the humid environment,like bathroom.In order to avoid electric shock or machine malfunction.
 REQUIRED ACTION	Operate the product when there is no people or pets around.
 DO NOT DISASSEMBLE	Do not disassemble or repair the product, power cord,control panel and other parts.In order to avoid electric shock ,fire or machine malfunction.
 PROHIBITED	Do not damage power cord Power cord can not be damaged,destroyed,bent,pulled, wrapped.Heavy things can not be hung on the power cord. Using damaged power cord can cause electric shock,short circuit or fire.

# Safety Precautions

Warning	
<div>  <div>PROHIBITED</div> </div>	Do not let children or mentally retarded persons operate the product alone. Keep children or mentally retarded persons away from the product when not using.
	Use only AC220V power.Power cord can not be wrapped on the product to avoid electric shock,short circuit or fire.
	Do not let child ride on the product and play,it may cause injury or machine malfunction.
	Do not put hand or foot into the gap between backrest and seat,or beneath the seat.It may cause injury or accident.
	Do not operate the product on head,belly,it may cause injury or uncomfortable.
	Do not use the product with body naked,it may cause damage to the skin.
	Product can not be used when cover is disconnected or damaged.

Attention	
<div>  <div>REQUIRED ACTION</div> </div>	<ul style="list-style-type: none"> <li>When power is black out,turn off the power switch immediately, then unplug the power cord to avoid accident when power is back.</li> </ul>
<div>  <div>FORBIDDEN WET HAND</div> </div>	<ul style="list-style-type: none"> <li>Do not use wet hand to touch power socket,plug or power cord.</li> </ul>
<div>  </div>	<ul style="list-style-type: none"> <li>Do unplug the power cord when not using or black out to avoid electric leakage ,electric shock or fire.</li> <li>When cleaning,do unplug the power cord to avoid fire or electric shock.</li> <li>When unplugging power plug,do not pull the power cord directly, take the plug and pull out to avoid electric shock short circuit or fire.Power cord and plug shall be checked regularly.</li> </ul>
<div>  <div>PROHIBITED</div> </div>	<ul style="list-style-type: none"> <li>Do not use the product after meal or drinking.</li> <li>Heavy things can not be hung on the power cord.</li> <li>Keep the product away from fire or heater when using,smoking is forbidden when using.Do not use the product on the underfloor heating to avoid fire.</li> </ul>

Warning	
<div>  <div>PROHIBITED</div> </div>	<ul style="list-style-type: none"> <li>Do not pull hard or use knife,sharp object to scratch the fabric,it may cause injury or accident.</li> <li>Do not bend,pull power cord hard,it may cause fire.</li> <li>Controller can not fall or be impacted,it may cause wrong movement or malfunction</li> <li>Do not use the product when power cord and plug are damaged or plug is loose,it may cause electric shock,short circuit or fire.</li> <li>Mind fingers when open or close the chair backrest.</li> <li>Do not exert external force on the parts,it may cause malfunction or injury.</li> <li>Do not use the product when sleeping,it may cause injury and discomfort</li> <li>Move the product by using rollers,do not move it not in rollers' direction.</li> <li>Place the product gently after moving</li> </ul> <div>  </div>

Warning	
<div>  <div>PROHIBITED</div> </div>	This product is designed for home use.Do not use it at other places.
	Do not use the product with blanket covered,it may cause temperature too high inside the machine.
	Do make sure power plug and socket match well with no object on.Power board can not be used,it may cause electric shock,short circuit or fire.
	Do not stand,tread or put heavy things on the product or leg parts,it may cause malfunction or fire.
	Do not use the product in the place where gas or chemical exists,it may cause deformation,malfunction or fire.
	Do not clean or spray the product with organic solvent,alcohol or insecticide,it may cause damage,or electric shock,fire.
	Do not let children or mentally retarded persons stay close to the product when operating,it may cause accident.
	Mentally retarded persons or paralyzed persons can not use the product,it may cause discomfort or injury.

 
 
 


## Main function

- 1** Shape detection:  
Before massage,system detects shape of user
- 2** L guide rail  
Guide rail fits human's S type curve,and L type guide rail is super long with 120cm massage distance.
- 3** Zero gravity  
Imitate zero gravity of space capsule,relax person fully.
- 4** Shortcut key  
Easy operation,easy to understand.
- 5** Powerful motor  
MAGUNES special motor is designed by rich experience and performances,with strong power and excellent quietness.
- 6** Flexible airbag  
Airbag with strong function and wide moving range has realized stretching exercise of people,helping user to keep slim body.
- 7** Hot compress(Waist)  
Advanced carbon fiber heating technique warms user's feet,legs safely and high efficiently.
- 8** Arm&hand massage  
Hand and front arm can be massaged to promote blood circulation.

## Part name&function

### ● Chair

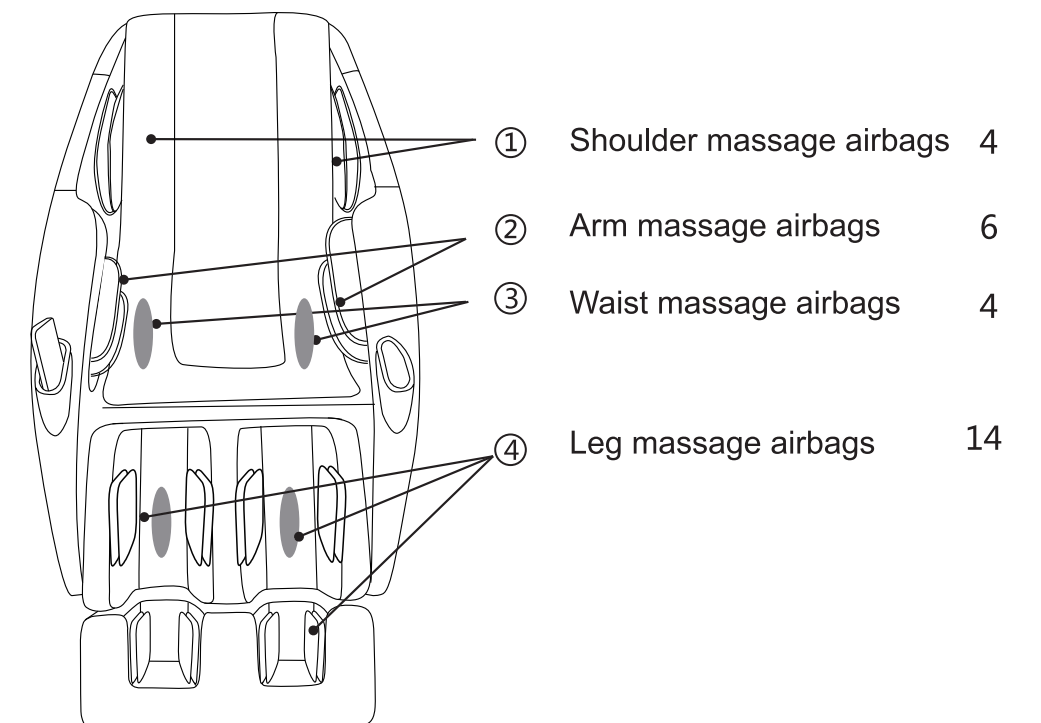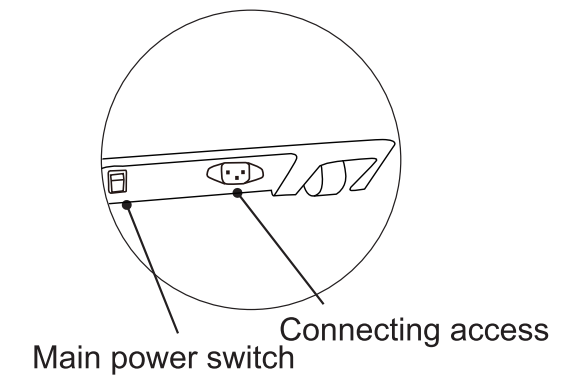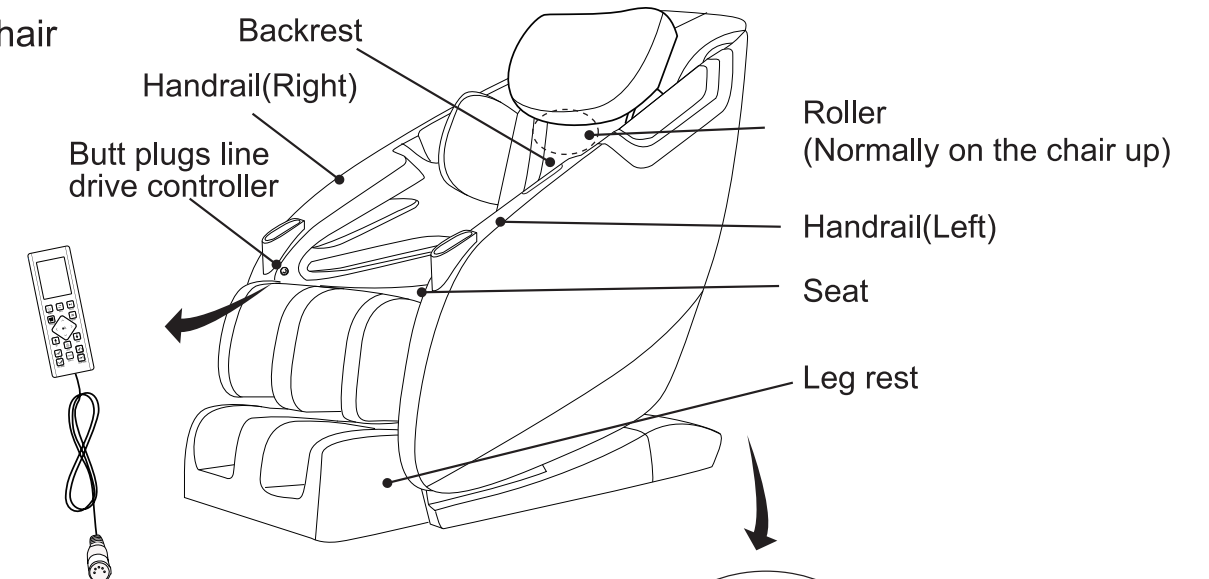


● Power cord and power socket

● Main power switch

● Controller

Attention1:Before inserting power cord,please ensure main power switch is off.  
Attention2:Do not disassemble or replace the power cord when it is damaged.A retailer or a qualified professional shall be needed.

Turn on the main power switch, massage chair into standby mode

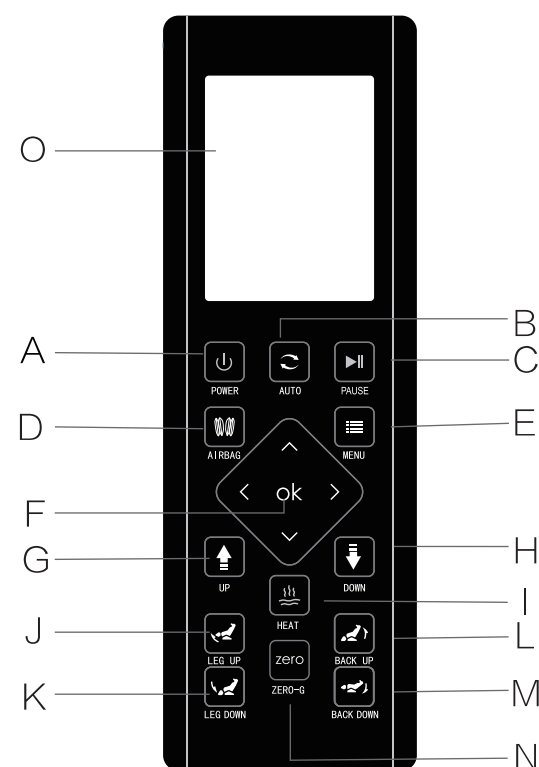

A	Power	After connecting power,press the button,the chair begins to detect shape of body,then it gets into the first automatic program "Man mode".If pressing the button again,the function shall be closed.Rated working time of the chair is 20 minutes.
B	Full auto	Press this button to get into auto program menu, according to your body condition and massage time,you can choose man massage,elderly massage,night sleep,stretching,neck&shoulder massage,waist&back massage.(See LCD for more details)
C	Stop/start	If pressing this button,the chair stops massage, press again,it starts massage.
D	Airbag	Press this button,you can choose part and intensity of airbags.
E	Menu	Press this button,you can choose auto program, manual program,airbag,heating,roller massage. (See LCD for more details)
F	OK	Choose up,down,left,right,then press "OK" to confirm.
G	Shoulder rising adjustment	When under manual mode,press Up button to adjust the exact position
H	Shoulder declining adjustment	Press Down button to adjust the exact position
I	Heating	Press this button to start heating,corresponding icon shall be lighted,press again,heating shall be closed with icon not lighted
J	Leg rising	Press this button,leg shall rise automatically,press again,rising stops
K	Leg declining	Press this button,leg shall decline automatically, press again,declining stops
L	Backrest rising	Press this button,backrest shall rise automatically, press again,rising stops
M	Backrest declining	Press this button,backrest shall decline automatically,press again,declining stops
N	Zero gravity	Press this button to get into zero gravity,press again,close zero gravity function
O	LCD	LCD shows detailed operation condition



WARNING

- Please do not spray water or other liquid on the chair.
- Do not operate the chair with wet hand.



CAUTION

- Do not sit on the controller, do not drop or step on the controller. Do not pull over the wire.
- Do not press the button with sharp object or it will result in damage.

### Before use

- Shoulder part is packed independently,our aftersales person shall finish the last assembly and commissioning after delivery
- When the temperature is too low to run the machine, please increase the ambient temperature gradually, do not increase the temperature in sudden. Please move the chair to the warm place and keep on waiting for 1 hour before starting.Or it will result in moisture of parts and abnormal operation.

→ Or it will result in moisture of parts and abnormal operation.

### Where to place the chair

 
Please make sure that the massage chair has about 30cm in front of it, leaving about 10cm in front of the chair to avoid touching the massage chair To walls or other items..




CAUTION

- Please do not use in a humid place such as sauna or bathroom.
- Place on a levels surface before use.
- Please do not use in the following situations: in a utility room or dusty place or in high temperatures (over 40 °C).
- Do not place it in the sun or near heating appliances.
- Please keep cigarettes, ashtrays or flammable goods away from the massage chair.

- To prevent damage to the floor and reduce noise, please lay carpet under the massage chair (do not use an electric blanket).
- Please be careful placing this machines, as it is heavy.
- To avoid excessive noise, make sure the massage chair is a minimum of 1 meter away from the TV, radio, and other AV machine.
- The weight of user should be below 100 kg.

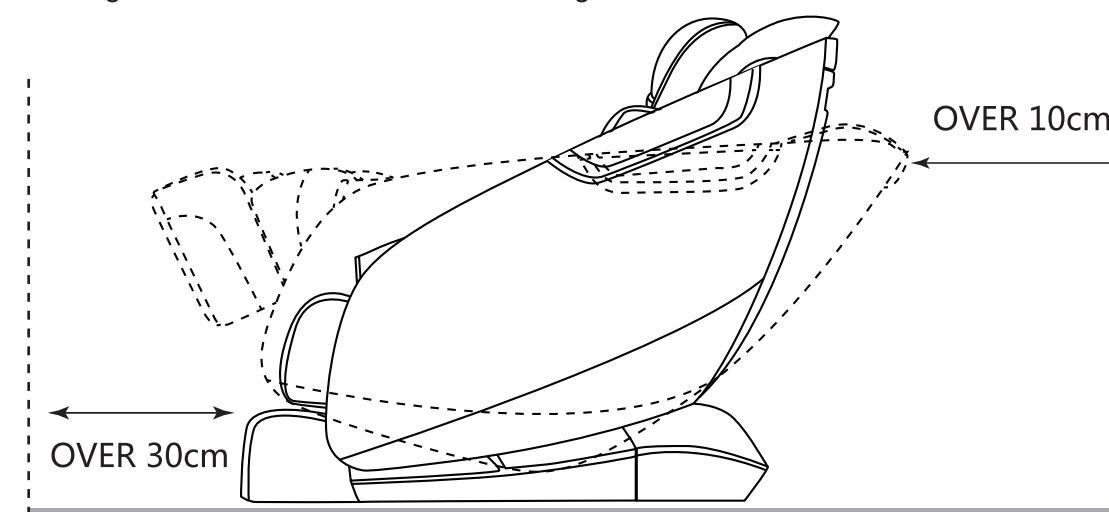

 - Please ensure there is a chair and accessories inside the packing box

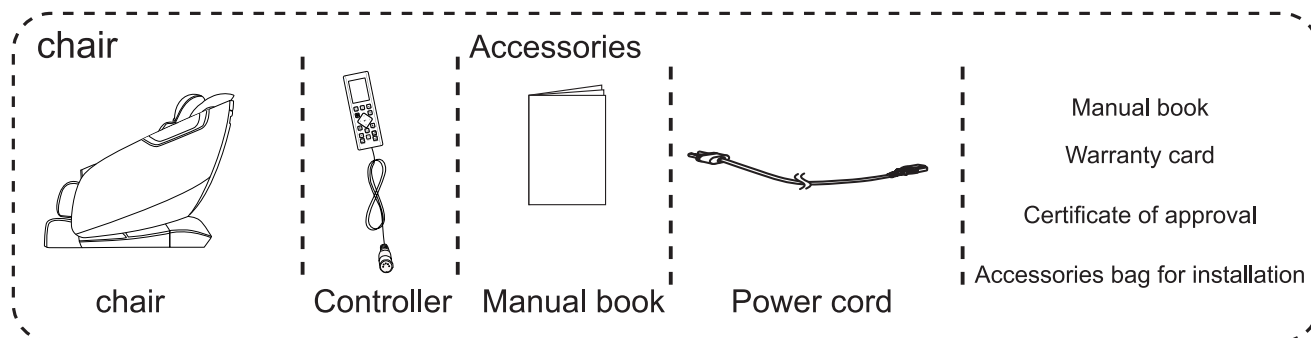


### Moving method

When moving, please turn off main power switch, then unplug the power plug.

Using caster to move

 Please put the back of the chair to the bottom and then hit the rear wheel, then move

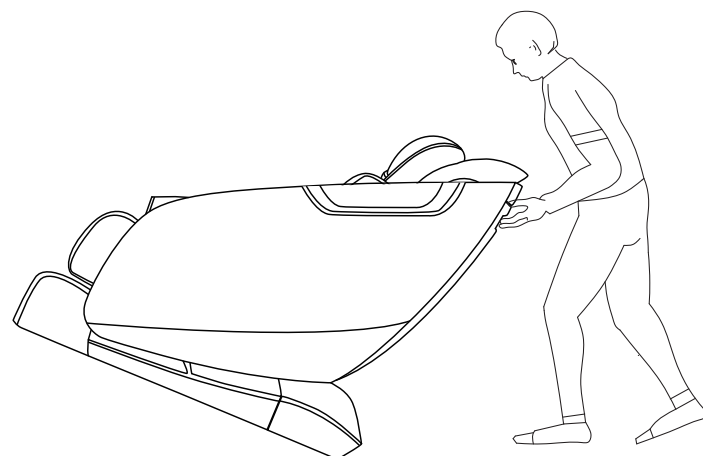


Attention

- The chair cannot be moved if the passage is less than 75cm in width.
- Contact the dealer in case you cannot move the chair normally.
- Due to the heavy weight of the chair, make sure that it will not damage your waist or other parts of your body during moving.
- Controller is connected to the chair, make sure it does not fall during moving.
- Do not move the chair with person loaded.
- Please move the chair after unplugging.


---> Otherwise it may cause damages to the power plug, causing fire disaster or electric.

### How to switch on the power

 ① Insert power cord into outlet

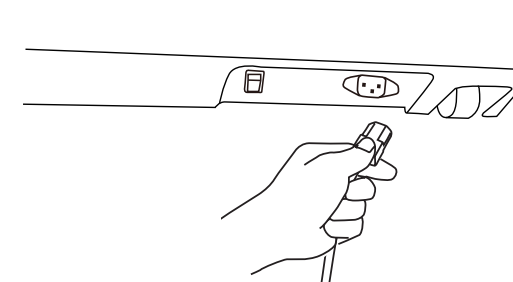

 ② Turn on main power switch on the back of the chair

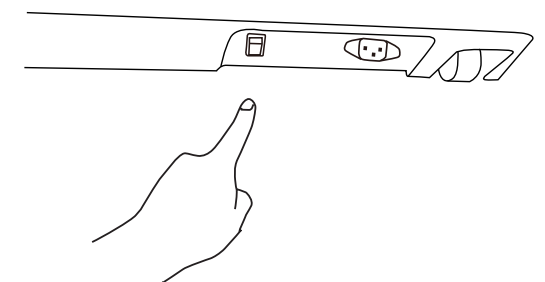

※ If the rollers get stuck, turn off the switch and press the ON/OFF button, the roller will be back to its initial position.

! Warning	<ul style="list-style-type: none"> <li>● Do not connect power cord to an external transformer</li> </ul>
! Attention	<ul style="list-style-type: none"> <li>● Ensure the main power switch is off before plugging the power socket or controller.</li> <li>● Please insert power plug and controller plug fully</li> <li>● Read this manual book carefully before using, set the chair according to the requires, ensure normal operation</li> </ul>

### Connecting the power

 
Check the power cord, power plug, socket on the chair, main power switch, controller are unbroken for the first time use or use after long time storage. Then plug power cord.



Plug



Power cord



Controller wire




Socket

## Confirm the fabric

 Make sure if the fabric is damaged according to the following procedures before use.

- ① Open zipper and back cushion from one side
- ② Put your hand between cushion and backrest to see if the fabric is damaged.

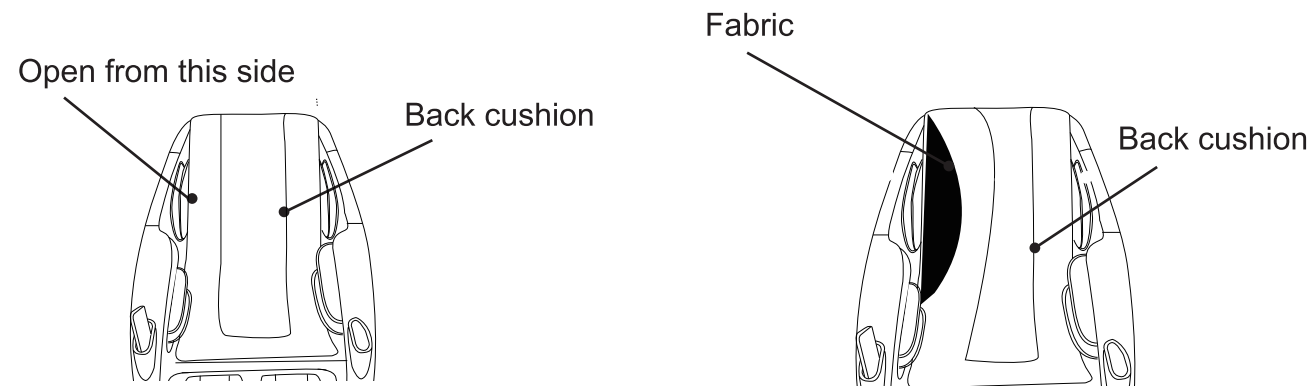

**Caution**

Before using the chair, confirm that whether there is damage in the material of the armchair or of other parts. In case of damage, even the smallest tearing, in the chair, please stop using it immediately, turn off the power switch, unplug the chair, and contact the customer service center. Never use the armchair with dismantled cushion or damaged material, otherwise there will be serious safety hazard.

## Adjust the chair

### Sitting in the chair

Under general circumstances, the rollers are laid folded at the upper waist of the backrest, besides, legrest declines to its lowest position. Please ensure the position of the rollers and legrest. If the rollers and legrest are laid other place, restart the chair, keep on waiting for the parts return to its initial position, then sit in the chair slowly. After using, slowly step out of the chair.



 
**Attention**

- Do not sit in the chair when legrest is rising, or after legrest rises, it may result in accident or reclining chair, causing personal injury.
- Raise the chair before using. Enjoy the massage from light massage course. Adjust the angle of your reclining angle according to your body figure.
- Do not stand on the legrest, it will break the legrest or even the whole chair.

## Adjustment of chair angle

Press this, legrest rises

Press this, legrest declines

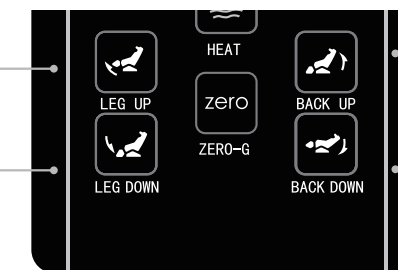

Press this, chair rises

Press this, chair lies

Attention: When main power switch that is at the back of the chair is on, angle adjusting can still be done even not pressing On/Off button of controller. However angle adjustment is unavailable when in emergency stop condition.




**Warning**

When adjusting angle, please make sure there is no person (Especially children) or pet around. Besides, there must be at least 30 cm space at the front or back of the chair, and there is no foreign matter in the way when rotating.

## Adjustment of legrest

Legrest can be lengthened if feet can not extend well. It can be lengthened by 160mm.

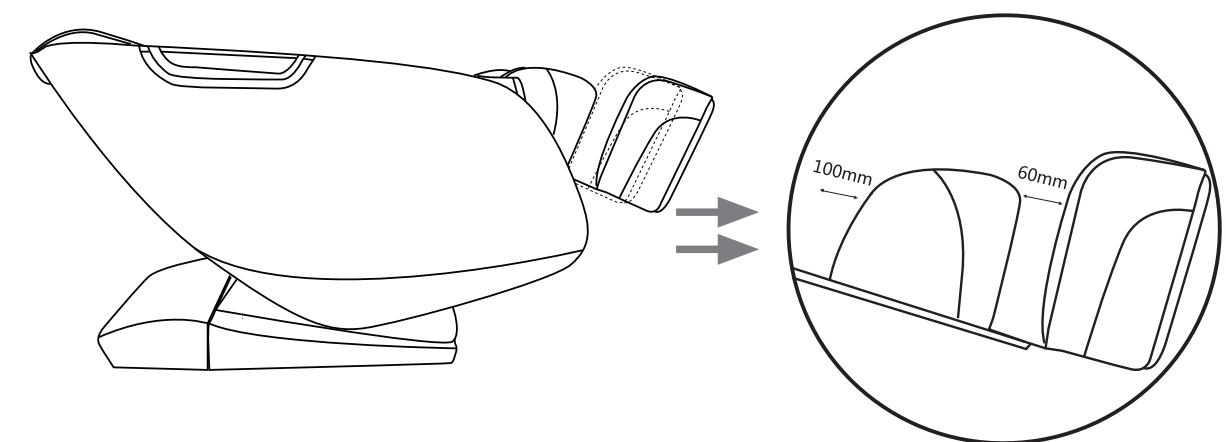


**Warning**

When lowering legrest, make sure there is no person (especially children) or pet around. Besides, hands or other object can not get stuck under the legrest.



## Adjusting the pillow


- If massage intensity of neck needs to be strengthened, please fold the pillow.

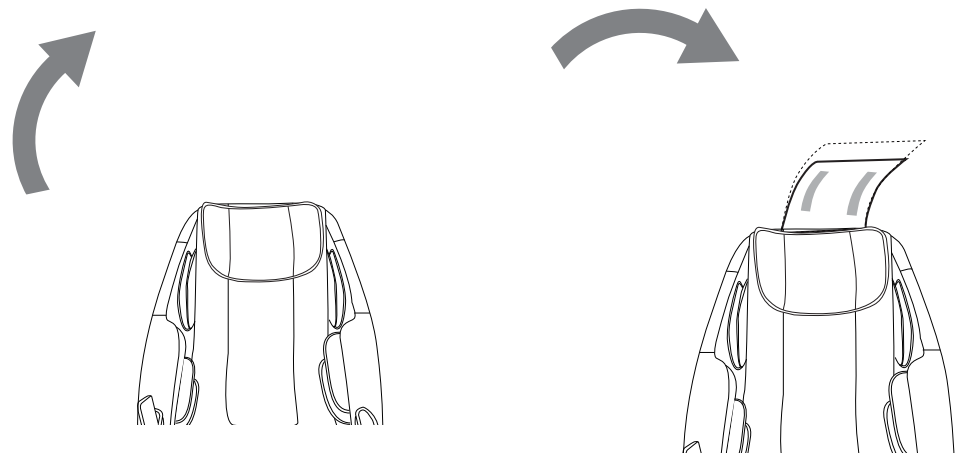


When pillow is folded, massage intensity of neck is strengthened, please keep massage time within 15 minutes. There is heavy object in the balancing bag of pillow, do not play with it, otherwise it may cause injury. Keep children away from this place

## Starts massage

### 1. Connecting the power, turn of main power switch

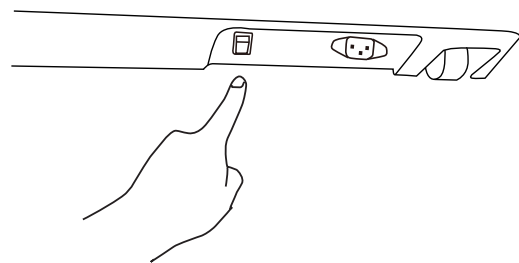

### 2. Press On/Off button, start auto program (Male mode)

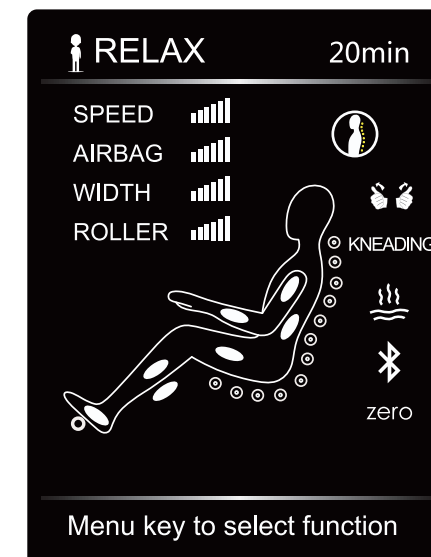

You can also select the appropriate massage procedure by pressing the menu key or other function keys.

### 3. Feather key and confirmation key

Use feather key and confirmation key to go through menu, move cursor, and choose different program.



### 4. Stop key

Press this key, the machine stops all the massage function, press again, massage function is back.


Image display example

Not chosen item shows white or does not show,once chosen,it shows colors.


Homepage



 Shape detection

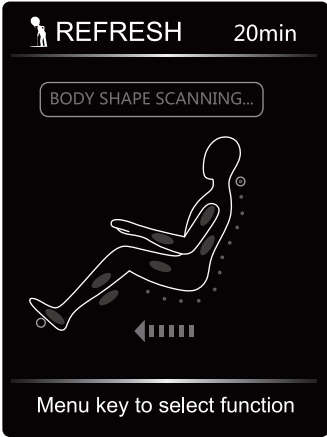

Heating function

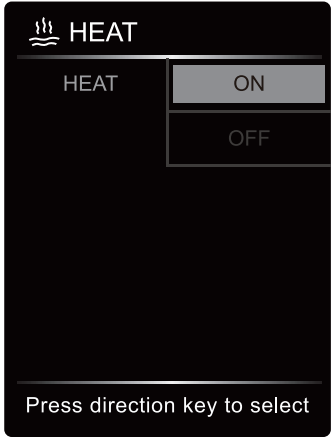 


Roller function




Auto mode



 
Manual mode

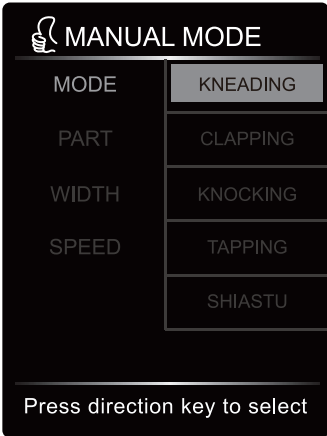


Time setting

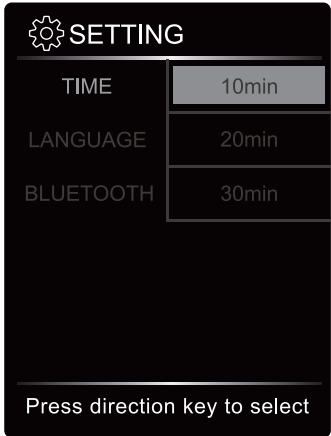 

Language setting

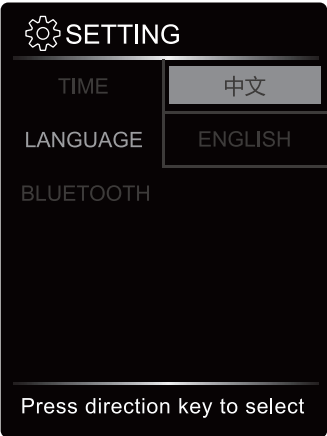 


Airbag massage

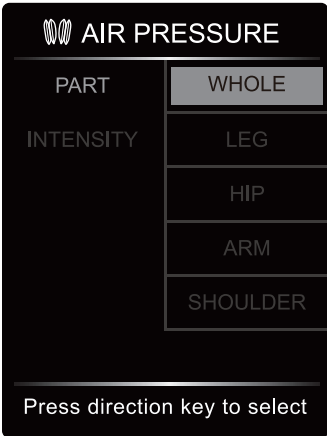 

Airbag intensity



 Bluetooth setting

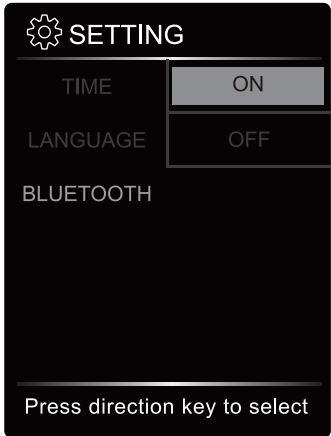




## Music play

Active speaker is built inside the chair, user can play music by using bluetooth connection.

 Massage with music around can promote massage effect

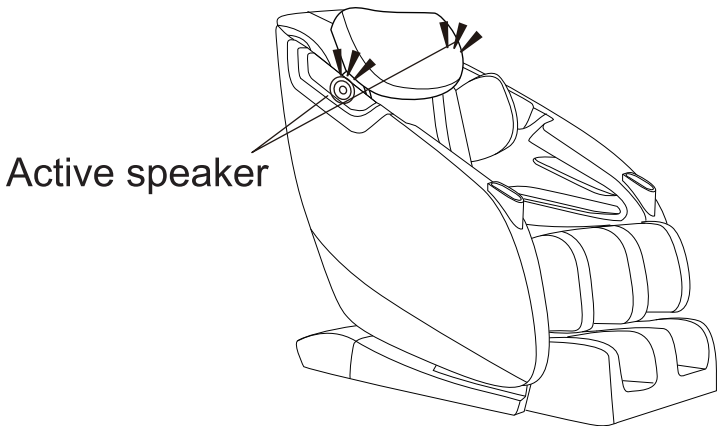

**! Attention** ● When playing music, turn down first, after adapting, slowly turn up.


## After use

Rise the chair up and lower the footrest completely.  
Press ON/OFF key to turn off the chair, wait until chair gets back to its initial status.  
After airbags deflate completely, rollers get back to its initial position, sole massage stops, heating stops, then step out of the legrest. Do not stand in the legrest. Turn off main power switch, unplug power plug.

**! Attention** After you use the chair, turn off the main power switch, and unplug the power plug from the socket.  
→ Otherwise, accident or injuries may be caused by children or pets.  
After you use the chair, be sure to raise back completely and lower the footrest completely.  
After you use the chair, please clean it and place it in dry places.  
When unplugging the power cord, please do not pull it directly; instead, you should unplug it pinching the power plug.  
Please be sure to put the power cord away in prevention of tripping over.

## Troubleshooting

If there is still a problem after trying the solutions given in this troubleshooting guide, stop using the chair immediately to prevent accident or injury, and unplug the power plug from the wall outlet. Contact the vendor or your nearest service center for assistance.

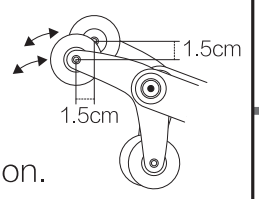Problem	Causes and troubleshooting	
The right and left rollers are out of alignment.		This is part of the design and is not a malfunction.
The roller moved to the bottom and stopped		
Noise during chair operation		
The rollers stop during the massage.	Sometimes when there is too much pressure to the rollers, they can stop moving temporarily. Slightly lift your body or lightly raise the Reclining Seat Back. (Be especially careful when a person who weighs 100 kg (220 lb) or more uses this chair)	If there is still a problem after the check, stop using the product immediately.
No power or the chair can't work after pressing the button	Check for the following: ① Is the power cord fully plugged into the wall outlet? ② Is the main POWER switch located at the front right of the chair set to ON? ③ Are you pressing two buttons at the same time?	
Abnormal heating on power cord and plug	Stop using immediately.	
Contact the vendor or your nearest service center.		Anyone other than an authorized serviceperson must not repair or disassemble.

## Safety check

### Regular Maintenance Will Preserve the Life of Your Chair

#### Have you experienced any of these problems?

- The chair does not start with the Main POWER switch set to ON.
- The power cord has been cracked or scratched.
- The power cord or plug becomes abnormally hot.
- The chair produces a burnt smell, abnormal sound or vibration.
- The auto timer function does not work in some cases.
- Other failures.

If you find anything listed on the left, stop using and unplug the power cord from the outlet to prevent failure or an accident. Be sure to contact the vendor or our service center for maintenance.

#### To use safely

The chair fabric (roller fabric) is a consumable part, and its service life is 3 years (conditions of use: two 15-minute sessions a day, every day). For safe use, periodic inspection by the vendor is recommended before the end of its service life.

\*Durable years vary depending on conditions of use.

\* After about five years of use, a professional inspection is recommended even if there are no symptoms or problems. For inspection fees, contact the vendor.

## Storage and care

### Storage

- After cleaning the dirt and dust, place the chair in a dry place
- If the chair is left unused for a while, please cover the chair to prevent from dust.
- Pets sometimes chew on power cord, so try to keep the pets away from the chair even when it is stored.

**Caution** Do not install the chair where it can come into contact with direct heat, such as direct sunlight or a radiator.

### Care and Maintenance

**Caution** ● When cleaning the chair, be sure to unplug the power plug from the wall outlet first. Do not plug or unplug the power plug with wet hands.

#### [Caring for the Back Pad and Covers]

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added. Then thoroughly wring it out before cleaning off any spots or grime.

**Caution** ● The fabric color can change if the chair is in contact with vinyl covers or wall coverings for a prolonged period of time.

#### [Caring for Other Plastic Parts]

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added, thoroughly wring it out, and clean off any spots or grime. Then wipe with a dry cloth so that no detergent residue remains.

**Caution** ● Do not use alcohol-based or other household cleaning products or abrasives because they can scratch or crack the finish or cause color to fade.

#### [Caring for the Remote Control]

Wipe dirt off the remote control with a dry cloth.

**Caution** ● Never use a moistened or wet cloth. May result in a mechanical failure.

Product specification

Type	LC6100
Power	AC 220-240V ~50/60Hz
Rated power	120W
Rated time	10 , 20 , 30 minutes
Dimension	Approx 74cm*136(164)*107(87) (W*L*H) The length and height figures in ( ) represent the dimensions when fully reclined.
Weight	About 70KG
Outer material	Synthetic leather,chemical fiber lining
Accessories	Main power cord,audio connecting wire,blanket(Optional),manual book,warranty card,certificate of approval,accessories bag for installation

